

# AIRPORT DIAGRAM

ATLANTA/ HARTSFIELD - JACKSON ATLANTA INTL (ATL)  
AL-26 (FAA)  
ATLANTA, GEORGIA

ATIS DEP 125.55  
ATLANTA TOWER  
119.5 125.325 381.6 Rwy's 8L-26R, 8R-26L  
119.1 123.85 381.6 Rwy's 9L-27R, 9R-27L  
GND CON  
121.9 381.6 Rwy's 8L-26R, 8R-26L  
121.75 381.6 Rwy's 9L-27R, 9R-27L  
CLNC DEL  
121.65

\*Group VI aircraft are restricted from using Taxiway Foxtrot east of Ramp 5 North to the west side of Taxiway Charlie.  
\*\*Group VI aircraft are restricted from using Taxiway Lima east of Ramp 5 South to west of Ramp 6 South.

LANDING AIRCRAFT CAN EXPECT TO REMAIN ON TOWER FREQUENCY UNTIL SPECIFICALLY INSTRUCTED TO CONTACT GROUND CONTROL.

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

SE-4, 01 SEP 2005 to 29 SEP 2005

SE-4, 01 SEP 2005 to 29 SEP 2005

